



## Dispensing Solutions







Ultra® Dispensing System Catalog

## The core of our Ultra System®

## Which components would you rather use?

39


Theirs

"Flash" inside hub restricts flow and reduces accuracy.



EFD hubs provide unrestricted flow and produce accurate consistent deposits.

EFD tubing is carefully polished and burr-free.



Burrs and flaws inside reduce accuracy.



It's the unique design and production of EFD® syringe barrels, pistons and dispense tips that significantly improve assembly fluid applications. The Ultra system makes dispensing easier, more controlled and safer, and these features translate directly into reduced costs.

If your dispense tip is blocked by metal burrs or "flash" from the molding process, if the syringe barrel is contaminated with dust or silicone, or if the piston isn't a precise fit, the amount of fluid you apply is going to vary.

Unfortunately, most disposable components look pretty similar from the outside. Companies that think they're saving money with "budget" tips and barrels often don't realize there is a difference — until reject rates start to climb, or even worse, their products fail in the field.

### **Consistent Components = Consistent Fluid Deposits**

With an EFD dispense system, you never worry about these problems. All EFD dispense tips, syringe barrels and pistons are precision molded in our own silicone-free US facilities, rigorously inspected and carefully packaged in clean, contaminant-free containers. Consistent product performance is guaranteed.



Hubs

Tubing

### Introduction

Whether you apply watery thin fluids or thick pastes, we can show you how to significantly cut costs, get better products and reduce fluid usage up to 75%.

This is what we do. And, we guarantee the results.

While you can sort through all the features and options of our dispenser/component products, we recommend you call one of our experienced Fluid Application Specialists. Our business is to match your very specific application needs with our wide range of dispensing tools to maximize your total cost savings.

We are an unusual company. Our no-compromise quality and service are unequaled. Our no-hassle guarantee, like our company, is rock solid and unequivocal.

We look forward to being of service.

### **Contents**

#### Dispensing systems

Air-powered 4-6
Mechanical
Hand-lever valves 8-9
Portable10
Components
Cartridge systems
Syringe barrel loaders
Accessories


# Dispense any assembly fluid accurately and consistently

epoxies cyanoacrylates solvents sealants grease anaerobics **lubricants** coatings flux silicones pastes gels electrolytes oils activators marking inks uv-cure ... and more!

It works and works and works... Keep up the great job!"

<sup>&</sup>quot;For 12 years, I have purchased your equipment. What can I say?

### **Ultra 2400 Series**

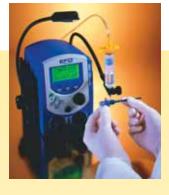



### **Key Features**

- All-digital, multi-function display with simultaneous readouts of air pressure, time and vacuum
- Password to lock out operator changes
- High speed solenoid for highly accurate deposits
- Universal power supply includes plug adapters for immediate use in any country
- Multilingual display, selectable on-site for English, French, German, Spanish, Italian, Japanese, Chinese or Korean
- Unique air management system provides rapid response and stabilizes cycle-to-cycle control
- Time increment adjustments as small as .0001 seconds for precise deposit control
- Selectable unit display psi, bar or kPa for pressure; inH<sub>2</sub>O, inHg, kPa, mmHg or Torr for vacuum
- Easy to use "Teach" function for initial setup



Dispensing kit includes components customized to your application.

### **Dispensing Workstation**

When it comes to applying assembly fluids — from watery thin solvents to thick silicones and paste-like epoxies — the innovative Ultra 2400 Series provide the most complete control available today.

The compact cabinet requires minimal work space, yet packs a powerful punch both inside and outside the box. A unique air management and high-speed solenoid work together for consistent deposit control. Work panels allow attachment of workstation lighting, ergonomic hand pieces, flexible syringe barrel mounting options or other beneficial tools for your specific application.



#### Models

2400: 0 to 6.9 bar (0 to 100 psi);

all fluids

**2415**: 0 to 1.0 bar (0 to 15 psi);

watery fluids

**2405**: 0 to 0.34 bar (0 to 5 psi);

micro deposits of very thin fluids

#### **Specifications**

Cabinet size: 14.3 x 18.1 x 17.3 cm

(5.63w x 7.12H x 6.82D")

Weight: 2.3 kg (5.0 lb)

**Cycle rate:** Exceeds 600 cycles per minute **Time range:** 0.0001 to 999.9999 seconds

Input voltage: 100 to 240 VAC AC input frequency: 47 to 63 Hz End-of-cycle feedback circuits:

5 to 24 VDC 100 mA maximum

Initiate circuits: Foot pedal, finger switch or 5 to 24 VDC signal

Meets or exceeds CE and CSA requirements

Warranty: 10 years

"We save 41% in man-hours equal to \$53/hour." c.n.c.

### **Ultra 1400 Series**

### Fluid Dispensing Kit

Whether you apply cyanoacrylates or thick sealants, the versatile, easy-to-use Ultra 1400 dispenses accurate, consistent deposits. Helpful Teach function lets the operator establish deposit size, then stores time required for automatic, repeatable results.

The Ultra 1400 kit arrives ready for use. EFD quality dispensing components are matched to your specific application for optimum results.



#### **Specifications**

**Cabinet size:** 13.3 x 15.1 x 15.2 cm (5.25w x 5.94h x 6.00p")

Weight: 1.4 kg (3.0 lb)

Time range: .001 to 99.9 seconds
Input voltage: Selectable 100/120/220 VAC
Initiate circuits: Foot pedal, finger switch
or 5 to 24 VDC signal

Time range: .001 to 99.9 seconds

Meets or exceeds CE and CSA requirements

Warranty: 2 years

#### Models

**1400:** 0 to 6.9 bar (0 to 100 psi);

all fluids

**1415:** 0 to 1.0 bar (0 to 15 psi);

watery fluids



### **Key Features**

- Dispenses all assembly fluids
- Vacuum control for watery thin fluids
- Precise, digital display of dispense time, with microprocessor control
- Choose from three modes of operation: Timed, Steady or helpful Teach for initial deposit setup
- Compatible with all EFD Ultra components
- Compact, stackable design takes less space on the benchtop
- Versatile barrel holder mounts left or right based on operator preference



Dispensing kit includes components customized to your application.

### **Ultra 870 Series**



#### **Key Features**

- All-pneumatic application of most assembly fluids
- Vacuum control for watery thin fluids
- Instant on/off controlled by pneumatic foot pedal
- Ideal for beading and potting



Dispensing kit includes components customized to your application.

### Ultra 850D



### Fluid Dispensing Kit

The economical Ultra 870 starter kit makes clean, fast work of applying beads, potting and other "by-eye" deposits. Instead of struggling with costly manual applicators like messy squeeze bottles, the adjustable air power lets users concentrate on getting the fluid exactly where it's needed.

The Ultra 870 kit arrives ready for use. EFD quality dispensing components are matched to your specific application for optimum results.



#### Model

870: 0 to 100 psi (0 to 6.9 bar); all fluids

#### **Specifications**

Cabinet size: 13.3 x 15.1 x 15.2 cm (5.25w x 5.94h x 6.00d")

(5.25W X 5.94H X

Weight: 1.0 kg (2.1 lb)
Warranty: 2 years

### **Pneumatic Dispenser**

Fluid dispenser with analog air and vacuum control. 0-100 psi (0-6.9 bar) output. All pneumatic, wall-mounted. Complete with an introductory supply of dispensing components.

#### Model

**850D**: 0 to 100 psi (0 to 6.9 bar); all fluids

#### **Specifications**

Wall mounted

### **Ultra 2800 Series**

### Positive Displacement System

The Ultra 2800 Dispensing System brings positive displacement technology to applications that require precise metering of assembly fluids that change viscosity or where a specific flow rate is necessary.

Unique patented technology within the system uses a flexible drive cable driven by a powerful stepper motor, to apply consistent dots or beads of virtually any assembly fluid. The heavy-duty motor is contained within the benchtop controller, keeping the handheld reservoir system lightweight and easy to use.

For setup, the operator can use a menu-driven touch pad to set deposit volume (as small as 0.1 microliter), flow rate and other specific criteria. After initial setup, there is no need to recalibrate or reset the system due to changes in fluid viscosity or reservoir volume.



#### **Specifications**

Size: 18.4 x 8.1 x 32.3 cm (7.25w x 3.18H x 12.73D") Weight: 3.7 kg (8.2 lb)

Cable assembly: 1.8 meters (6 ft) length to 2800-30: For 30cc syringe barrels

end of handset

Input voltage: 100 to 240 VAC Meets or exceeds CE requirements

Warranty: 2 years


#### Models

2800-3: For 3cc syringe barrels
2800-5: For 5cc syringe barrels
2800-10: For 10cc syringe barrels
2800-30: For 30cc syringe barrels



#### **Key Features**

- Highly repeatable, precise fluid control
- No need to recalibrate during operation
- All electric; does not require shop air
- Programmable pullback eliminates drooling
- Compatible with all EFD Ultra components
- All digital, multi-function display with readouts of deposit volume, rate, shot count, and more
- 100 user-defined memory cells that store shot volume, syringe barrel size, pullback, dispense rate, and pause

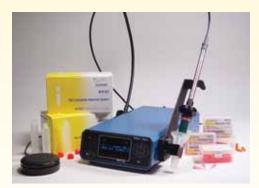

Dispensing kit includes components customized to your application.

### **Hand-Lever Dispense Valves**

### **Key Features**

- Ergonomic design
- Positive shutoff, no seals

hanger

squeeze lever

hanger

Very fine flow control



Ergonomic, manually operated dispense valves solve many assembly applications where beads of sealants, lubricants or cyanoacrylates are required, and when flexibility, reach and large fluid reservoirs are needed. EFD hand lever valves allow a controllable flow rate and clean fluid cutoff from a (1) or (5) liter pressurized tank.

### 752V-HL

Designed specifically for precise dispensing of cyanoacrylates and anaerobics. The 752V-HL is ideal for making beads for gasket and grommet bonding, for MEK bonding of plastics, and for applying anaerobics to automotive parts. The flexible diaphragm ensures millions of trouble-free deposits without sticking or repairs. One liter tank accepts one-pound bottles for economical application.



- Ergonomic design
- Positive shutoff, no dripping
- Very fine fluid dead volume

740V-HL

dispense tip

Designed for dispensing precise beads and dots of low to medium viscosity fluids such as UV-cure adhesives, paints and inks, activators, and lubricants. The 740V-HL incorporates precise needle control with zero fluid dead volume and features positive shutoff to prevent dripping.




squeeze lever dispense tip

"Feeding directly from the adhesive bottle eliminates mess and refilling. We're producing better-looking parts in **half the time**." ECM MOOTO CO.

### 725-HL

Designed for dispensing thicker fluids such as epoxies, fluxes, sealants and wood glues. The 725-HL provides relatively high flow for heavy-duty operation, without maintenance or downtime. It features a piston design for clean, positive shutoff and end-of-cycle snuff-back.



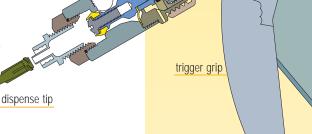



#### **Key Features**

End-of-cycle snuff-back


hanger not shown

- Ergonomic design
- Positive shutoff
- Simplified maintenance


### The System

Choosing the right tank is primarily based on two factors: how much fluid you are dispensing and whether the fluid is supplied in 1 pound or 1 liter bottles.

The air regulator is selected based on fluid viscosity. Watery fluids require the 0-1.0 bar (0-15 psi) regulator, while thicker fluids need the 0-100 psi (0-6.9 bar) regulator. Since tanks are charged by plant air, we recommend the five-micron filter regulator to filter contaminants. See accessories, page 19, for details.



Model 615DTH: 1.0 liter tank



Model 626DTH: 5.0 liter tank

#### Tank reservoirs

Each tank is shipped complete with constant bleed precision air regulator and gauge, air hose, liner and fluid feed tubing.




Model	#615DTH	#626DTH
Tank body	cast aluminum	cast aluminum
Inside diameter	9.7 cm (3.82")	17.3 cm (6.81")
Inside depth	1.75 cm (6.87")	24.8 cm (9.75")
Replaceable liner Liner capacity	polyethylene 0.95 liter	polyethylene 3.8 liters
Overall width	17.3 cm (6.81")	28.3 cm (11.14")
Overall height	35.6 cm (14.01")	40.6 cm (15.98")
Regulator & gauge	100 psi (6.9 bar)	100 psi (6.9 bar)
Max. operating		
pressure	100 psi (6.9 bar)	100 psi (6.9 bar)
Bottle size accepted	1 pound	1 liter
	#615DTL	#626DTL
Regulator & gauge	15 psi (1.0 bar)	15 psi (1.0 bar)

### **Portable Hand Dispensers**



### **Ultra Dispense Components**

The correct selection of syringe barrel, piston and dispense tip provides complete fluid application control, safe, easy, no drip or ooze.



#### pistons


Low-friction, inert polymer PE piston with double-wiper action ensures clean, smooth emptying of syringe barrel without drip or ooze.

Special LV Barrier™ for cyanoacrylates, solvents and watery fluids.

Smooth-wall SPE piston prevents tunneling and stringing of pastes and sealants.

Designed for Ultra 2800 positive displacement system, red piston ensures snug fit with the 2800 plunger.





Precision-molded proprietary polypropylene syringe barrels with thick walls prevent cracking or rupturing, and provide excellent chemical compatibility.


Available in clear; light-block amber for UV-cure; and opaque black.

Engineered 0° taper internal bore provides complete wiping and controlled dispensing.

Internal radius provides smooth-flow dispensing.

Threaded sleeve makes positive seal with SafetyLok™ tips and caps.






Unique 360° SafetyLok™ thread ensures safe, positive attachment to the barrel.

Internal taper provides smooth fluid flow.

No burrs and flash free means accurate deposits.



Large flats for easy twist-on, twist-off.

Flexible polypropylene tubing bends into recesses, prevents scratching, and spreads fluids easily.



#### stainless steel

Unique hub design ensures close-tolerance overall tip length and precise tubing alignment.

Burr-free, polished stainless steel tube opening for undisturbed liquid deposits.



#### **Benefits**


- Molded silicone-free
- Certified safe for industrial use
- Positive dispense cutoff
- Disposable, no cleanup
- Closed system
- High-strength copolymer

#### **Shipments**

All Ultra components are shipped from stock within 24 hours of receipt of order.

#### **Quality Assurance**

EFD certifies that all EFD components are designed for safe industrial operation when used in accordance with our technical data, manuals and brochures. EFD certifies that all components are precision molded in an EFD silicone-free facility.



#### Barrel dimensions

	Α	В
3cc	1.1 cm (7/16")	7.3 cm (2 7/8")
5cc	1.4 cm (9/16")	6.8 cm (2 11/16")
10cc	1.9 cm (3/4")	8.9 cm (3 1/2")
30cc	2.5 cm (1")	11.6 cm (4 9/16")
<u>55cc</u>	2.5 cm (1")	17.3 cm (6 13/16")

### Disposable Reservoir System



Five sizes, three colors and four types of syringe barrels/pistons make up the Ultra reservoir system for proper dispensing of all kinds of assembly fluids.

For samples, recommendations and immediate customer service:

info@efd-inc.com www.efd-inc.com/samples

#### Syringe barrel & piston sets

	QTY	MOST FLUIDS Clear Barrels White Pistons	Clear Barrels Blue LV™ Barrier	Clear Barrels Red Pistons	Light Block* Amber Barrels White Pistons	Opaque Black Barrels White Pistons
3cc	(50)	5109CP-B	5109LV-B	5109CPD-B	5109LBP-B	5109UP-B
5cc	(40)	5110CP-B	n/a	5110CPD-B	5110LBP-B	5110UP-B
10cc	(30)	5111CP-B	5111LV-B	5111CPD-B	5111LBP-B	5111UP-B
30cc	(20)	5112CP-B	n/a	5112CPD-B	5112LBP-B	5112UP-B
55cc	(15)	5113CP-B	n/a	n/a	5113LBP-B	5113UP-B

Reservoirs available in clear for most fluids; translucent amber for UV and light-sensitive materials (\*240 to 550 nm); and opaque black to ensure complete light blockage.

Amber barrels also available with red pistons; request the LBPD series. LV Barrier sets include tip caps and are designed for cyanoacrylate and very low viscosity fluid dispensing. Red PD pistons are for use with the Ultra 2800 positive displacement system.

#### Storage end/tip caps

	QTY	End Cap	
3cc	(50)	5109EC-B	أ
5cc	(40)	5110EC-B	
10cc	(30)	5111EC-B	
30cc	(20)	5112EC-B	
55cc	(20)	5112EC-B	
	QTY	Tip Cap	<b>W</b>
All sizes	(50)	5113-B	

Snap-on end cap for leakproof barrel sealing. Opaque SafetyLok™ tip caps fit all barrel sizes.

#### Syringe barrels without pistons

	QTY	Clear Barrels	Light Block Amber Barrels	Opaque Black Barrels
3cc	(50)	5109LL-B	5109LB-B	5109UV-B
5cc	(40)	5110LL-B	5110LB-B	5110UV-B
10cc	(30)	5111LL-B	5111LB-B	5111UV-B
30cc	(20)	5112LL-B	5112LB-B	5112UV-B
55cc	(15)	5113LL-B	5113LB-B	5113UV-B



Note: Order appropriate SmoothFlow pistons separately.

#### SmoothFlow<sup>™</sup> barrel pistons

	QTY	White PE	Blue LV	Orange SPE	Red
3cc	(50)	5109PE-B	5109LVP-B	5109SPE-B	5109PDP-B
5cc	(40)	5110PE-B	n/a	5110SPE-B	5110PDP-B
10cc	(30)	5111PE-B	5111LVP-B	5111SPE-B	5111PDP-B
30cc	(20)	5112PE-B	n/a	5112SPE-B	5112PDP-B
55cc	(20)	5112PE-B	n/a	5112SPE-B	5112PDP-B

Pistons ensure constant dispensing force, prevent drip or ooze, contain hazardous fumes and empty all fluid from barrel.

#### **Adapter assemblies**

	QTY	Yellow Acetal 0.9m (3ft) Hose	Yellow Acetal 1.8m (6ft) Hose	Yellow Acetal 0.9m (3ft) Hose/Trap
3cc	(1)	1000Y5148	1000Y5148-6	1000Y-5148-F
5cc	(1)	1000Y5149	1000Y5149-6	1000Y-5149-F
10cc	(1)	1000Y5150	1000Y5150-6	1000Y-5150-F
30/5500	(1)	100075152	1000V5152-6	1000Y-5152-F

One-piece molded SnapLok<sup>™</sup> adapter provides safe attachment of syringe barrel. Includes 0.4 cm (5/32") OD flexible polyurethane tubing, Buna N O-ring, quick-connect and safety clip.

Note: Refer to price list for replacement parts.

#### **ESD-safe components**

Unique barrel/dispense tip/adapter systems are manufactured to ensure static electricity is dissipated, offering high conductivity and low carbon black loading. ESD-safe components are ideal for dispensing adhesives and epoxies in electronics, disk drive and SMT production.

Free samples and ESD Test Report: email info@efd-inc.com



### **Precision Dispense Tips**



After choosing the most appropriate dispenser and barrel/piston combination, the deposit is defined by the type of dispense tip selected.

Each EFD tip is precision made, without burrs or flash, to produce the very best deposit control.



Transparent boxes keep tips clean, handy and easy to identify.

#### **Smooth-flow tapered tips** (50 tips per box)


gauge	standard	opaque rigid	color	
14	5114TT-B	5114RTT-B	Olive	
16	5116TT-B	5116RTT-B	Grey	"
18	5118TT-B	5118RTT-B	Green	4
20	5120TT-B	5120RTT-B	Pink	
22	5122TT-B	5122RTT-B	Blue	
25	5125TT-B	5125RTT-B	Red	

Use with gel cyanoacrylates, UV-cure adhesives, sealants, and particle-filled materials or any medium to high viscosity fluid. Molded of polyethylene with UV-light block additive.

#### Flexible tips (50 tips per box)

gauge	12.7 mm (0.50")	38.1 mm (1.5")	color	
15	5115PPS-B	5115PP-B	Amber	
18	5118PPS-B	5118PP-B	Green	
20	5120PPS-B	5120PP-B	Pink	
25	5125PPS-B	5125PP-B	Red	


Flexible polypropylene tubing for application into difficult-toaccess areas. Easily drags along edges and around corners and prevents scratching. Tubing can be cut to length.



#### Precision stainless steel tips (50 tips per box)

gauge	6.35mm (0.25")	12.7mm (0.50")	25.4mm (1.0")	38.1mm (1.5")	45°/12.7mm (0.5")	90°/12.7mm (0.5")	45°/38.1mm (1.5")	color	
14	5114-0.25-B	5114-B	5114-1-B	5114-1.5-B	5114-B-45	5114-B-90	2173-B	Olive	
15	5115-0.25-B	5115-B	5115-1-B	5115-1.5-B	5115-B-45	5115-B-90	n/a	Amber	
18	5118-0.25-B	5118-B	5118-1-B	5118-1.5-B	5118-B-45	5118-B-90	2174-B	Green	
20	5120-0.25-B	5120-B	5120-1-B	5120-1.5-B	5120-B-45	5120-B-90	n/a	Pink	
21	5121-0.25-B	5121-B	5121-1-B	5121-1.5-B	5121-B-45	5121-B-90	2175-B	Purple	
22	5122-0.25-B	5122-B	5122-1-B	5122-1.5-B	5122-B-45	5122-B-90	n/a	Blue	
23	5123-0.25-B	5123-B	5123-1-B	5123-1.5-B	5123-B-45	5123-B-90	n/a	Orange	
25	5125-0.25-B	5125-B	5125-1-B	5125-1.5-B	5125-B-45	5125-B-90	n/a	Red	
27	5127-0.25-B	5127-B	n/a	n/a	5127-B-45	5127-B-90	n/a	Clear	
30	5130-0.25-B	5130-B	n/a	n/a	5130-B-45	5130-B-90	n/a	Lavender	
32	5132-0.25-B	n/a	n/a	n/a	n/a	n/a	n/a	Yellow	

Burr-free, polished, passivated stainless steel dispense tips with polypropylene SafetyLok $^{\text{\tiny M}}$  hubs for a secure fit to barrel reservoirs. • 6.35 mm (0.25") tips: Fast point-to-point dispensing. • Smaller gauges ideal for microdots. • 12.7 mm (0.50") tips: Standard all-around precision dispense tips. • 25.4 mm (1"), 38.1 mm (1.5"), 45° and 90° tips: Easy access into hard-to-reach areas.






### **Precision Dispense Tips**

#### PTFE-lined tips (50 tips per box)

12.7 mm (0.50") 25.4 mm (1.0") color 5121TLC-B Grey 0.006" 5125TLCS-B 5125TLC-B Pink




Use for microdot application of low viscosity fluids.



#### PTFE-coated tips (20 tips per box)

gauge	ID	OD	12.7 mm (0.50")	color
21	0.020	0.033	5121PC-B	Purple
23	0.013	0.026	5123PC-R	Orano

Controls wicking to stop drips for optical media applications.



#### **Chamfered tips**

gauge	12.7 mm (0.50")	color	
18	5118CH-B (50)	Green	
23	5123CH-B (50)	Orange	
25	5125CH-B (50)	Red	
33	5133MD-B*(25)	Black	

Resists clogging of cyanoacrylates.

Use for microdot application of low viscosity fluids.

#### Oval tips (50 tips per box)

gauge	12.7 mm (0.50")	color	
15	51150VAL-B	Amber	
Makas fl	at ribban danasita a	of thick pact	oc coolont

Makes flat ribbon deposits of thick pastes, sealants and epoxies.

Outlet size is 1.98 x 0.41 mm (.078" x .016").



#### **Brush tips** (sold individually)

style	standard	high flow
soft bristle	5140A	5140HF
stiff bristle	5141A	5141HF

Spread glues and greases. Nylon bristles, 50.8 mm (2") length.



#### Tip shields (10 shields per box)

size	shield	color	
3cc	5105	Red	
5cc to 55cc	5106	Black	

Reusable tip shields for light-sensitive and UVcure adhesives. Fits over dispensing tip hub.



#### Color coding for tip sizes

Color	Gauge	Inner Dia.		Outer	Dia.	
		inch	mm	inch	mm	
Olive	14	.060	1.54	.072	1.83	
Amber	15	.053	1.36	.065	1.65	
Grey	16	.047	1.19	n/a	n/a_	
Green	18	.033	0.84	.050	1.27	
Pink	20	.024	0.61	.036	0.91	
Purple	21	.020	0.51	.032	0.82	
Blue	22	.016	0.41	.028	0.72	
Orange	23	.013	0.33	.025	0.65	
Red	25	.010	0.25	.020	0.52	
Clear	27	.008	0.20	.016	0.42	
Lavender	30	.006	0.15	.012	0.31	
Yellow	32	.004	0.10	.009	0.24	
				Note: OD dime		
				stainless	tips only	

Whatever tip style, all sizes are color coded to ensure the specified size is used.



#### Free Syringe & Tip Poster for Adhesive Dispensing.

Quickly identify the right dispensing components for your fluid application process.

Chart shows how to select the best syringe & tip combination to ensure complete fluid control. Post in tool cribs and at workstations.

Request online at www.efd-inc.com/poster

All shipments made within 24 hours.

<sup>\*5133</sup>MD-B is 6.35 mm (0.25") long

## **Precision Dispense Tips Selection**



Taking time to match your specific application requirement and assembly fluid with the most suitable dispense tip is well worth the effort. We supply an appropriate assortment of tip types and sizes with each dispenser and valve.

For additional samples or recommendations and immediate customer service:

info@efd-inc.com www.efd-inc.com/samples


Applications	tapered	stainless steel tube	flexible	crimped PTFE-lined
Very low viscosity fluids		•	•	•
Particle-filled pastes	•	•		•
Microdot deposits		•		•
Fluid is reactive to metal	•	-	•	•
Depositing in recesses		•	•	
Spreading/smearing	•		•	<b>A</b>
Fast-curing glues	•	<b>A</b>	•	•
Beading, striping	•	•	•	
To avoid scratching	•		•	•

Ke	ey
•	Recommended
	Satisfactory
	Do not use

Liquid/fluid/paste	tapered	stainless steel tube	flexible	crimped PTFE-lined
Adhesives	•	•	•	•
Anaerobics		<b>A</b>		<b>A</b>
Conformal Coatings				
Cyanoacrylates			•	•
Gel cyanoacrylates	•	<b>A</b>	•	<b>A</b>
Epoxies		•		
Greases		•		
Light-cure adhesives		*	*	•
Oils	<b>A</b>	•	•	<b>A</b>
Paints		•		
Sealants				
Silver epoxy		<b>^</b> +		•
Solder creams/braze pastes	•	•	<b>A</b>	
Solder masks	•	•		
Solvents		•		•
UV-cure adhesives	•	*	*	<b>A</b>


precision

<sup>&</sup>lt;sup>+</sup>Chamfered tips are recommended for best results.

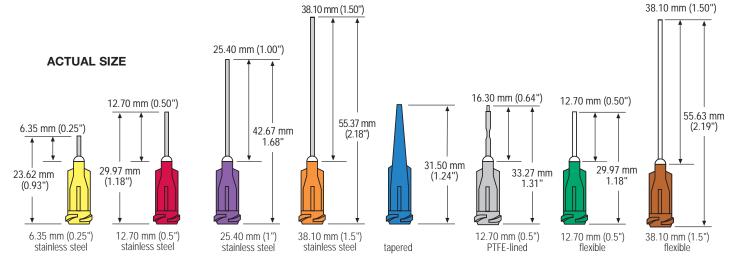

<sup>\*</sup>OK if used with tip shield, part# 5105 or 5106. See page 14.

### **Cartridge Systems**

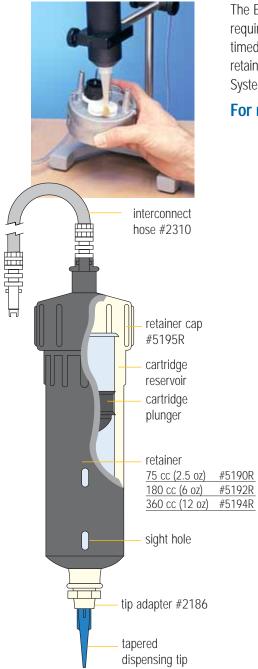

The EFD Cartridge System is useful when reservoir capacity larger than 55cc is required. Attached to any EFD air-powered dispenser, cartridges can be used for timed and "by-eye" dispensing for potting and beading. Precision molded nylon retainer and cap provide safe dispensing pressure up to 100 psi. The Cartridge System is not recommended for small, repeat timed deposits.

For more information and assistance, call 800-556-3484.

### Cartridge reservoir assembly

size	order #
75 cc (2.5 oz)	5190-2.5
180 cc (6 oz)	5192-6
360 cc (12 oz)	5194-12

Includes 1.5 m (5 ft) connecting hose with male quick-connect to plug into an EFD dispenser, retainer cap, cap gasket, retainer, cartridge, plunger, tip adapter, end cap and outlet cap.

#### Nozzles (10 per bag)

size	order #
6.35 x .318 cm (2.5 x .125")	5180-B
6.35 cm x .157 cm (2.5 x .062")	)5181-B
10.6 x .157 cm (4.0 x .062")	5182-B
10.6 x .08 cm (4.0 x .031")	5183-B

Polypropylene nozzles thread into all cartridge sizes; 6.35 mm (1/4") NPT thread.

#### Disposable cartridge reservoirs

cartridge item	order #
75 cc (2.5 oz) cartridge reservoir	5190C
180 cc (6 oz) cartridge reservoir	5192C
360 cc (12 oz) cartridge reservoir	5194C
cartridge plunger, one size fits all	5196
cartridge retainer cap gasket	5195G
cartridge tip adapter	2186

All parts are packaged separately. The cartridge reservoir is molded polyethylene. The retainer cap gasket is EPR.



## 300 ml. (1/10 gallon) cartridge assembly for caulking tubes

description

order #


300 ml. (1/10 gallon) caulking cartridge assembly


5201-SYS

Complete system to accept caulking type cartridge includes 1.5 m (5 ft). connecting hose, retainer cap, retainer, tip and nozzle adapters.

For details on optional pistol grip and production stand, please refer to the EFD Ultra Price List.






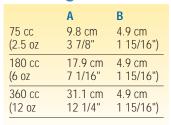

Cartridge reservoir

## **Syringe Barrel Loaders**

Pourable fluids are easy. Just fill the barrel. For best results, fill up to 50% of the barrel capacity.



#### 920/940 Series syringe barrel loader

For nonpourable fluids, including grease, pastes, sealants, and others, manually load or use an EFD syringe barrel loader.

With the #920BL barrel loader, pack the fluid into a 12 ounce cartridge. Then place the pre-filled cartridge into the barrel loader. Using air pressure, the barrel loader fills the syringe barrel (with a




piston installed) from the bottom up.

If the fluid comes packed in a 300 ml. (1/10 gallon) caulking type cartridge, use the EFD #940BL barrel loader.

If you receive frozen epoxies or other fluids in medical type syringes with a manual plunger, request the EFD luer-to-luer fitting #2160 to transfer the material.

#### **EFD** valve system


For cyanoacrylates, consider transfer from 1 lb bottles to barrels using our 752V valve system, or incorporate a controller to provide exact fills automatically.

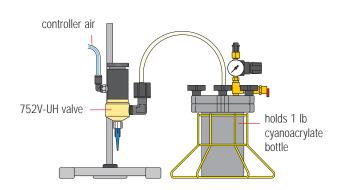




#### 8000BF automated filling station


For automatic filling of barrels, our 8000BF system makes this operation fast, easy, accurate and clean. The 8000BF can be configured several ways to meet your specific needs.



**8000BF-HPA** for use with fluid supply pressures above 6.9 bar (100 psi).



**8000BF-HF** for use with cartridge and tank reservoirs at fluid supply pressures up to 6.9 bar (100 psi).



**8000BF-PW** for use with reactive fluids that require disposable fluid path — up to 5.5 bar (80 psi) fluid supply pressure.

17

## **Productivity Tools & Accessories**

Choose from a wide range of optional tools to maximize your dispensing system.

#### Flexible arm syringe barrel holder

Mounts to dispenser cabinet; can be adjusted to multiple positions. For Ultra 2400, 1400 and 870 Series dispensers. #2429



#### Stiff arm syringe barrel holder

Mounts to Ultra dispenser cabinet and holds barrel in a fixed position. For Ultra 2400, 1400 and 870 Series dispensers. **#2434** 



Trigger the dispense cycle from this grip with built-in touch sensor and high beam penlight. Fits all EFD syringe barrels. For Ultra 2400 Series dispensers, patent# U.S. 6,938,795 B2. **#2440FS** 



#### **Ergonomic hand grip**

Hand grip only without finger switch (for all dispensers) #2441





#### Syringe barrel production stand

Provides full-barrel swivel, horizontal and vertical adjustment. Accepts all EFD barrels. **#7300A** 



#### Finger switch

Low voltage, push button finger switch controls dispense cycle. Fits all EFD syringe barrels. For Ultra 1400 Series dispensers. **#2015FS** 



#### **Workstation lamp**

Mounts on flex arm and provides targeted lighting on work area. For Ultra 2400 Series dispensers. #2437



#### Safety shield

Provides splash-guard protection when dispensing toxic fluids. For Ultra 2400 and 2800 Series dispensers. **#2436** 




#### **Production extension shelf**

Provides flat work surface for other tools or dispenser stacking. For Ultra 2400 Series dispensers. #2443



1.7x magnification mounts on flex arm; perfect for assembly of small parts. For Ultra 2400 and 2800 Series dispenser. **#2442** 

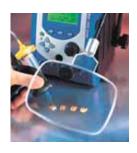

#### I/O connector assembly

Allows easy connection to the dispenser for external control. One end has a male DIN connector; opposite end connects to



external devices. **#2446** 8-pin connector for Ultra 2400 and 2800 Series; **#7154** 9-pin connector for Ultra 1400 Series.

"When it came time to upgrade our dispensers... Called EFD and they gave me a **trade-in credit for my old equipment**." Technical Group


#### Liquid filter trap

Prevent fluid from being sucked back into the dispenser. **#2435** for the Ultra 2400 Series; **#1000FLT-Y** for the Ultra 1400 and Ultra 870 Series.



#### Mikros<sup>™</sup> pen system

Unique 0.25cc fluid reservoir is built into the Mikros tip for dispensing microdots of 2-part epoxies, UV-cure and high performance adhesives. Mix in small batches and fill, and save on fluid costs. #5800MP-SYS

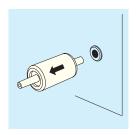

#### Cleanroom filter muffler

Designed for cleanrooms and other demanding production areas. Attaches to Ultra dispenser exhaust port and filters output air to meet Fed 209-B (0.5 micron particulates). #2400FT for the Ultra 2400 Series; #2170FT for the Ultra 1400 and Ultra 870 Series.



Convenient all-in-one vacuum generator and pen system makes it easy to pick-and-place small parts. Connects to an air-powered Ultra dispenser to generate steady vacuum force. Includes complete kit. #2455



#### **Five-micron regulator**

Required for production areas where clean, dry, filtered factory air is not available, or to stabilize plant air supply for more consistent deposits.

#2000F755


# 100

### Vacuum generator with pickup pen

Vacuum on/off foot pedal provides a steady hand for pick-and-place function. Includes complete kit with pickup pen. Accepts all EFD syringe barrels. #10VAC



Recommended for systems dispensing cyanoacrylates. Removes liquid aerosols from air supply. **#2000F756** 

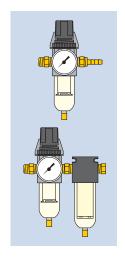

#### Pickup tool

Hand-operated VACTweezer picks up any smooth object. Includes complete kit with pickup tool. **#VACTweezer** 





### HPx high pressure dispensing system

Produces up to 700 psi of pressure in an EFD syringe barrel when connected to a standard 100 psi dispenser. Apply precise amounts of thick RTV silicones, medical adhesives and epoxies through small gauge tips. #HP7x (3cc) or #HP4x (10cc)



#### Dispensing tip sampler kit

The 140-piece kit includes samples of standard and specialpurpose EFD dispensing tips, SmoothFlow pistons, barrel tip caps, end caps and detailed Ultra Guide booklet. **#5100** 

"If every component in the USA had the same level of quality in their products and the same **commitment to customer service** as EFD, there would be no question about the global competitiveness of our country." Scott Webb, ITW Chronomatic

### **More EFD Products**



## Precision Dispense Valves

Engineered for the most demanding mechanical and environmental applications, EFD low-maintenance valve systems provide very reliable dispensing solutions for benchtop applications, automated lines and machine builders.


info@efd-inc.com



#### **Ultra TT XYZ System**

EFD's Ultra TT xyz dispensing systems increase productivity by combining precise assembly fluid application with fast, accurate automated positioning. Easily programmed with a PDA handheld.

info@efd-inc.com

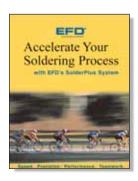

#### SolderPlus®

Switching from flux-cored wired to SolderPlus provides better quality solder joints with reduced costs. SolderPlus dispensed with air-powered dispensing systems delivers precise, repeatable deposits at high speeds without waste.

info@efd-inc.com



#### MicroCoat® Lubrication System

EFD's MicroCoat precision LVLP lubrication system was specifically developed for the metal stamping industry. The MicroCoat system applies the exact amount in a fine, even film. Tools last longer and presses run faster.

info@efd-inc.com

Since 1963, EFD dispensing systems have helped thousands of companies make precise deposits of adhesives, lubricants and other assembly fluids.

Innovative design, unparalleled product performance, unwavering commitment to quality, and old-fashioned customer support make EFD the leader in the diverse markets we serve.

Today, the company does business on the same principles on which we were founded: to help our customers make better products, in less time, at lower cost.

We invite you to learn more, and look forward to working with you.



For EFD sales and service in over 30 countries, contact EFD or go to www.efd-inc.com/contact

#### EFD, Inc.

East Providence, RI USA

800-556-3484; +1-401-434-1680 (outside the USA) info@efd-inc.com www.efd-inc.com

#### EFD International Inc.

Dunstable, Bedfordshire, UK

0800 585733 or +44 (0) 1582 666334

Ireland 00800 8272 9444

europe@efd-inc.com www.efd-inc.com

#### EFD, Inc., Asia

China: +86 (21) 5854 2345

china@efd-inc.com www.efd-inc.com/cn Singapore: +65 6896 9630 sin-mal@efd-inc.com

Note: Specifications and technical details are subject to change without prior notification. ©2006 Nordson Corporation. v051806